

SVOORA


WOODEN KENDAMA


INSTRUCTIONS MANUAL





#23161 - 23162 - 23163 - 23164

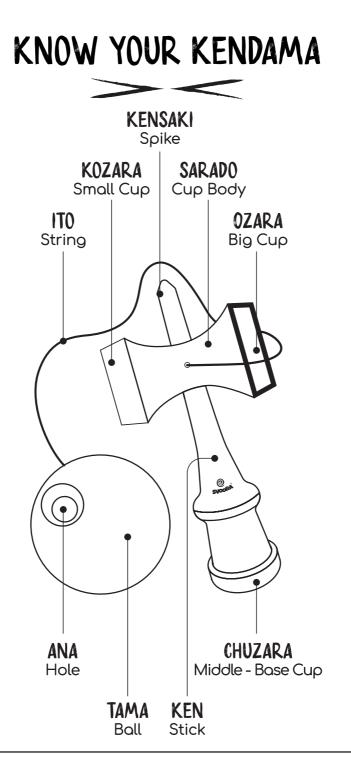

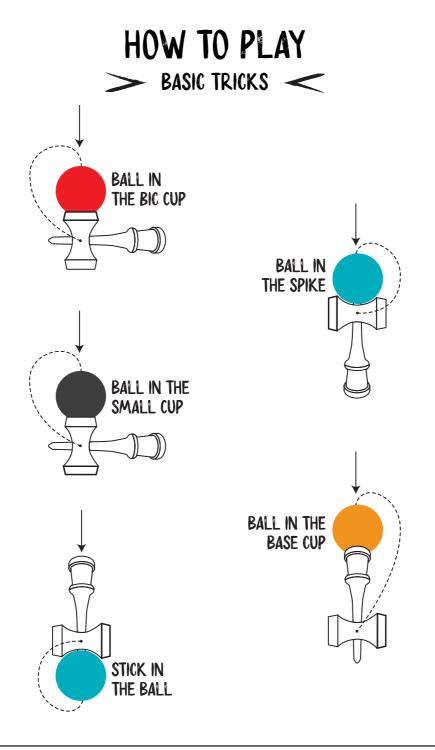



1. The thickness of the string should be 1mm, the length should be around "4 fingers", as seen in the image and the advisable material in *'Nylon'*.

2. There are 2 knots in the string: one passing through the wooden ball and ball bearing and one passing through the centre of the wooden handle.

3. Tie a knot, leaving about 1.5cm loose edge on the end of the rope.

4. The end loose of the rope must be inserted in the hole.

5. Pull the string from the other side, so that the knot is stable and secured.